

# Instructions for installing the shower enclosure

 


The purpose of this manual is to help install the shower enclosure without a shower tray on the floor tiling.

# Matrix


## MSDPS L - 100, 110, 120 x 80, 90, 100

Type	Floor inclination	Adjustment
MSDPS - 80	A1 735	-10, +10
MSDPS - 90	A1 835	-10, +10
MSDPS - 100	A1 935	-10, +10
MSDPS - 100	B1 980	-15, +5
MSDPS - 110	B1 1080	-15, +5
MSDPS - 120	B1 1180	-15, +5

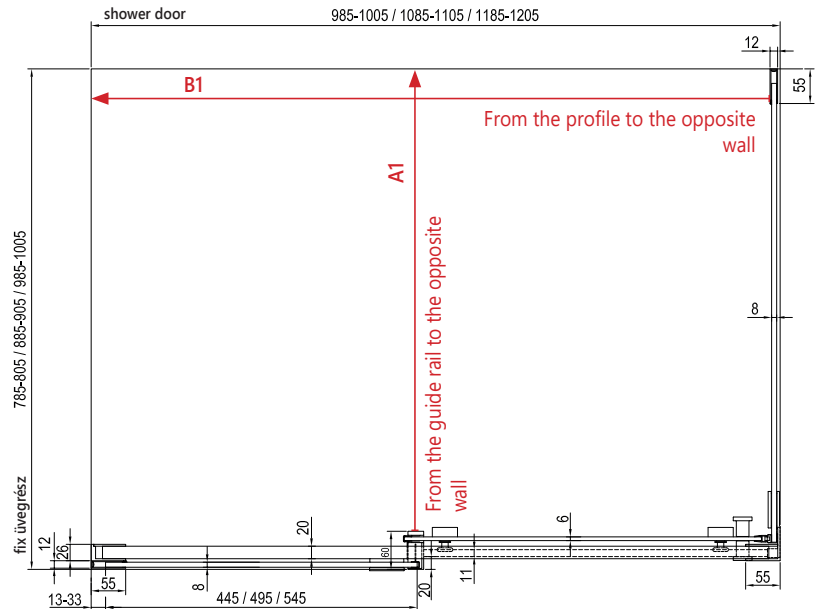


## MSRV4 - 80, 90, 100

 Type	Floor inclination	Adjustment
MSRV4 - 80	735	-10, +10
MSRV4 - 90	835	-10, +10
MSRV4 - 100	935	-10, +10

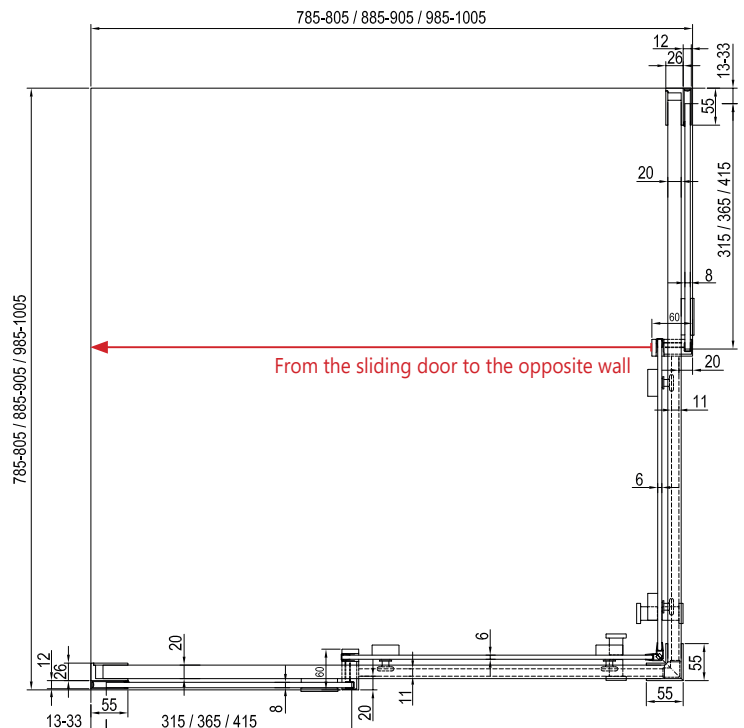


## SMSRV4 - 80, 90

 Type	Floor inclination	Adjustment
SMSRV4 - 80	775	-7, +8
SMSRV4 - 90	875	-7, +8

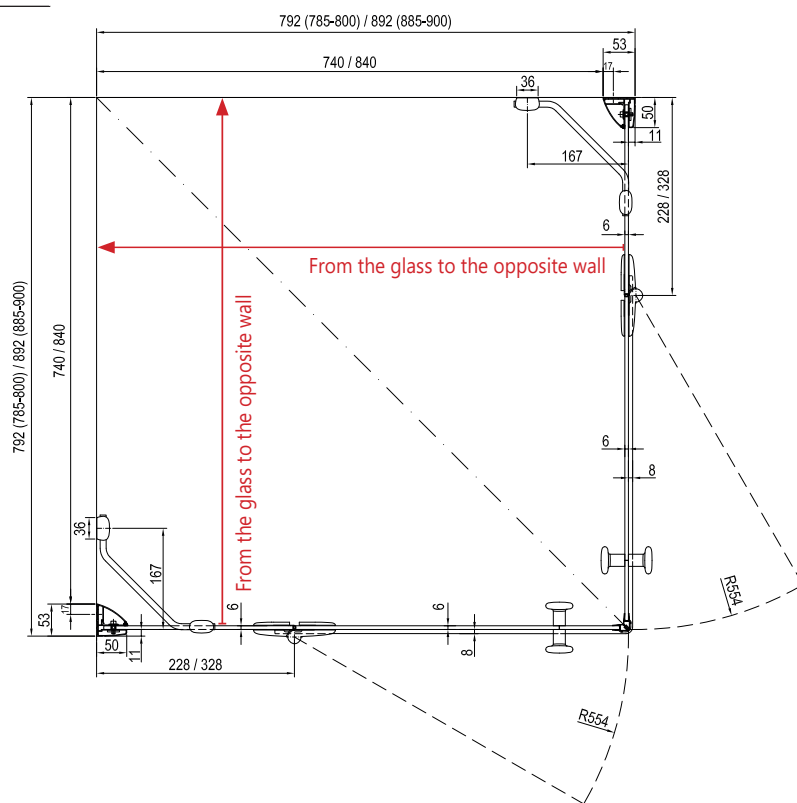

## SMSD2 L - 90B, 100B, 110B, 120B + SMPS L - 80, 90, 100

 
Type	Floor inclination	Adjustment
SMPS - 80	A 775	-7, +8
SMPS - 90	A 875	-7, +8
SMPS - 100	A 975	-7, +8
SMSD2 - 90	B 875	-7, +8
SMSD2 - 100	B 975	-7, +8
SMSD2 - 110	B 1075	-7, +8
SMSD2 - 120	B 1175	-7, +8

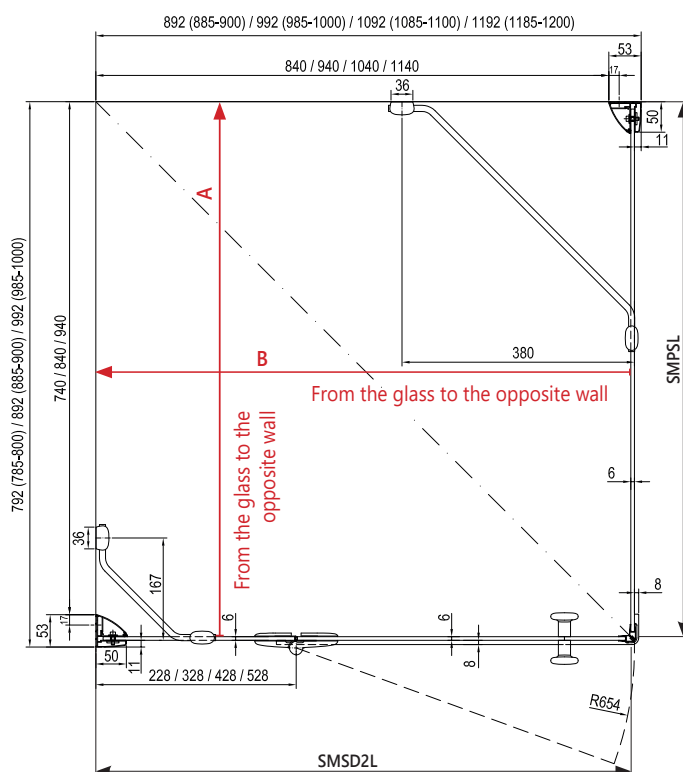

# Pivot


## PDOP1 - 80, 90 + PPS - 80, 90, 100

 Type	Floor inclination	Adjustment
PDOP1 - 80	B 770	+15, -10
PDOP1 - 90	B 870	+15, -10
PPS - 80	A 745	+15, -10
PPS - 90	A 845	+15, -10
PPS - 100	A 945	+15, -10

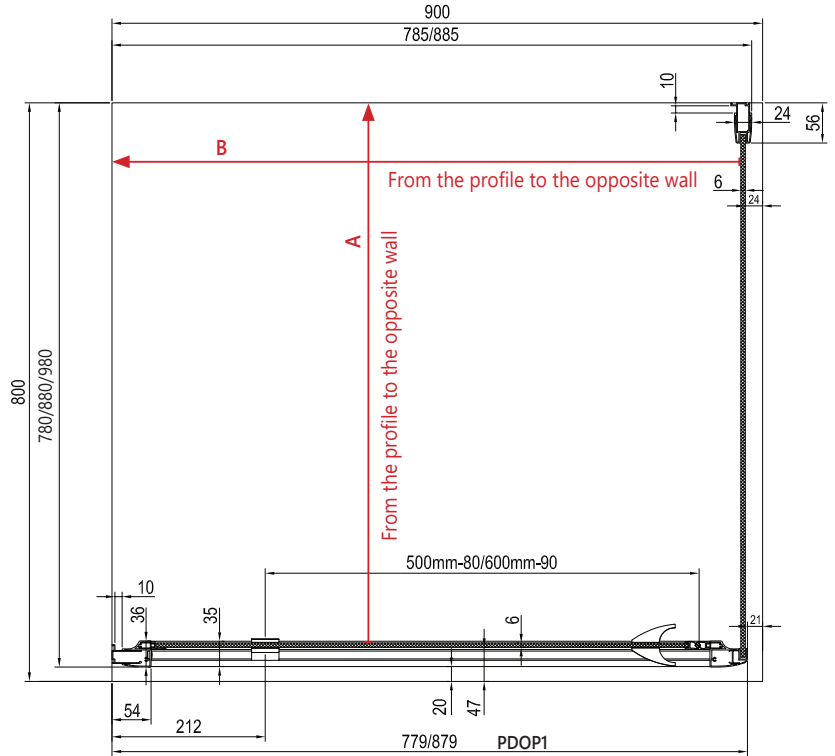

## PDOP2 - 100, 110, 120 + PPS - 80, 90, 100

 
Type	Floor inclination	Adjustment
PDOP2 - 100	B 970	+15, -10
PDOP2 - 110	B 1070	+15, -10
PDOP2 - 120	B 1170	+15, -10
PPS - 80	A 745	+15, -10
PPS - 90	A 845	+15, -10
PPS - 100	A 945	+15, -10

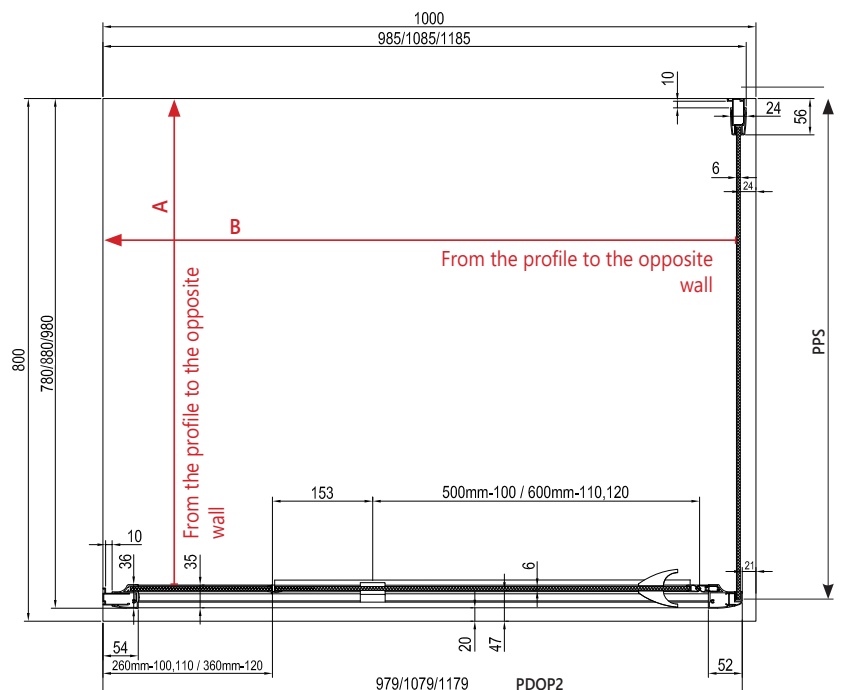

# 10°


## 10DP2 - 100, 110, 120 + 10PS - 80, 90, 100

 Type	Floor inclination	Adjustment
10PS - 80	A 760	-10, +10
10PS - 90	A 860	-10, +10
10PS - 100	A 960	-10, +10
10DP2 - 100	B 976	-10, +10
10DP2 - 110	B 1076	-10, +10
10DP2 - 120	B 1176	-10, +10

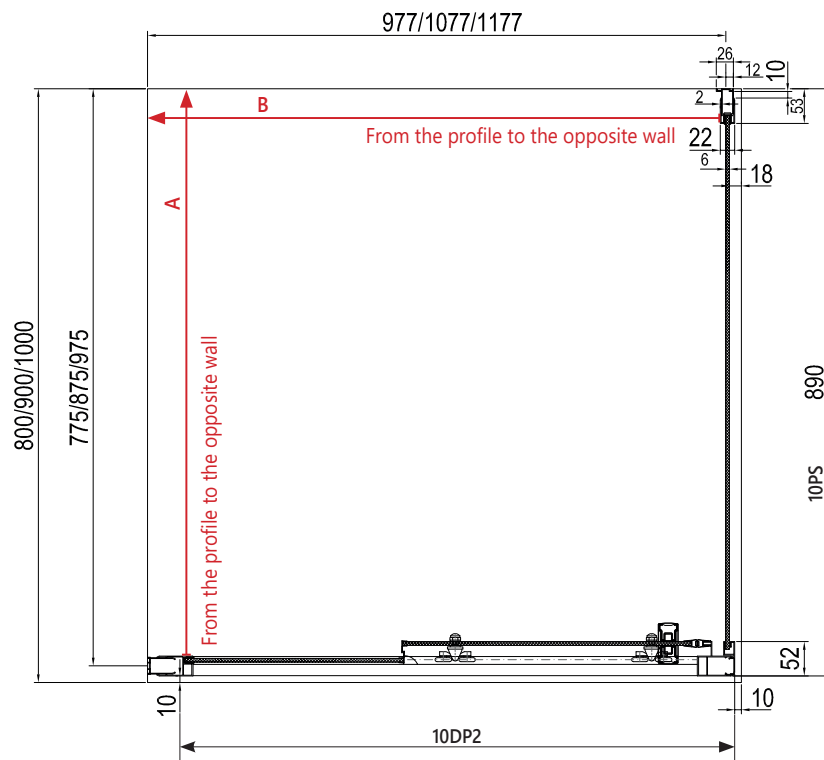


## 10RV2 - 80, 90 / 10RV2K - 80, 90, 100, 110, 120

 Type	Floor inclination	Adjustment
10RV2/10RV2K - 80	760	-10, +10
10RV2/10RV2K - 90	860	-10, +10
10RV2K - 100	960	-10, +10
10RV2K - 110	1060	-10, +10
10RV2K - 120	1160	-10, +10

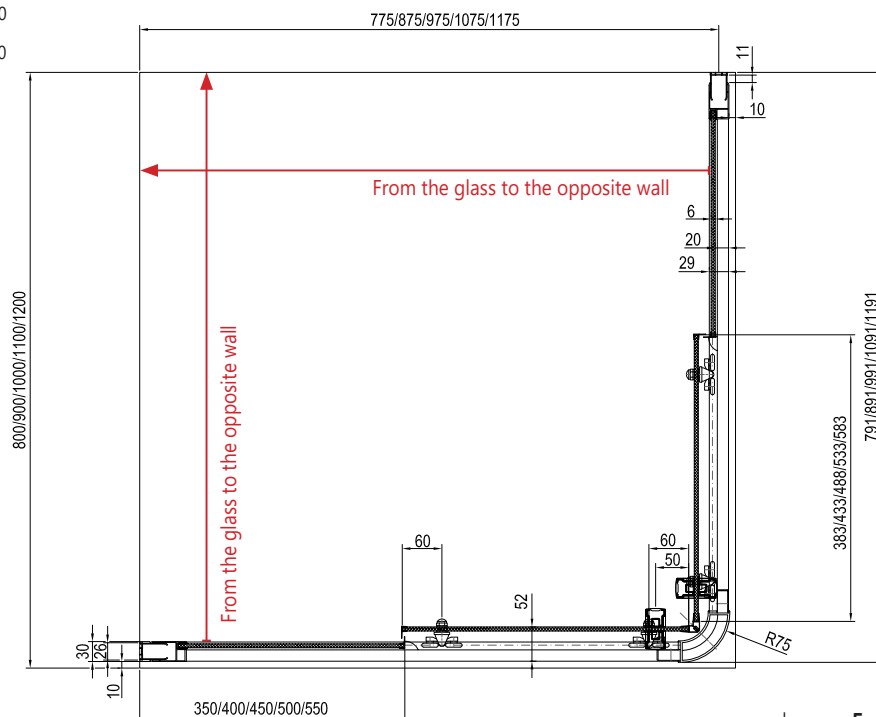


## BSDPS L - 80, 90, 100 x 100, 110, 120

 Type	Floor inclination	Adjustment
BSDPS L - 80	A1 - B1 789	-6, +6
BSDPS L - 90	A1 - B1 889	-6, +6
BSDPS L - 100	A1 - B1 989	-6, +6
BSDPS L - 110	B1 1089	-6, +6
BSDPS L - 120	B1 1189	-6, +6

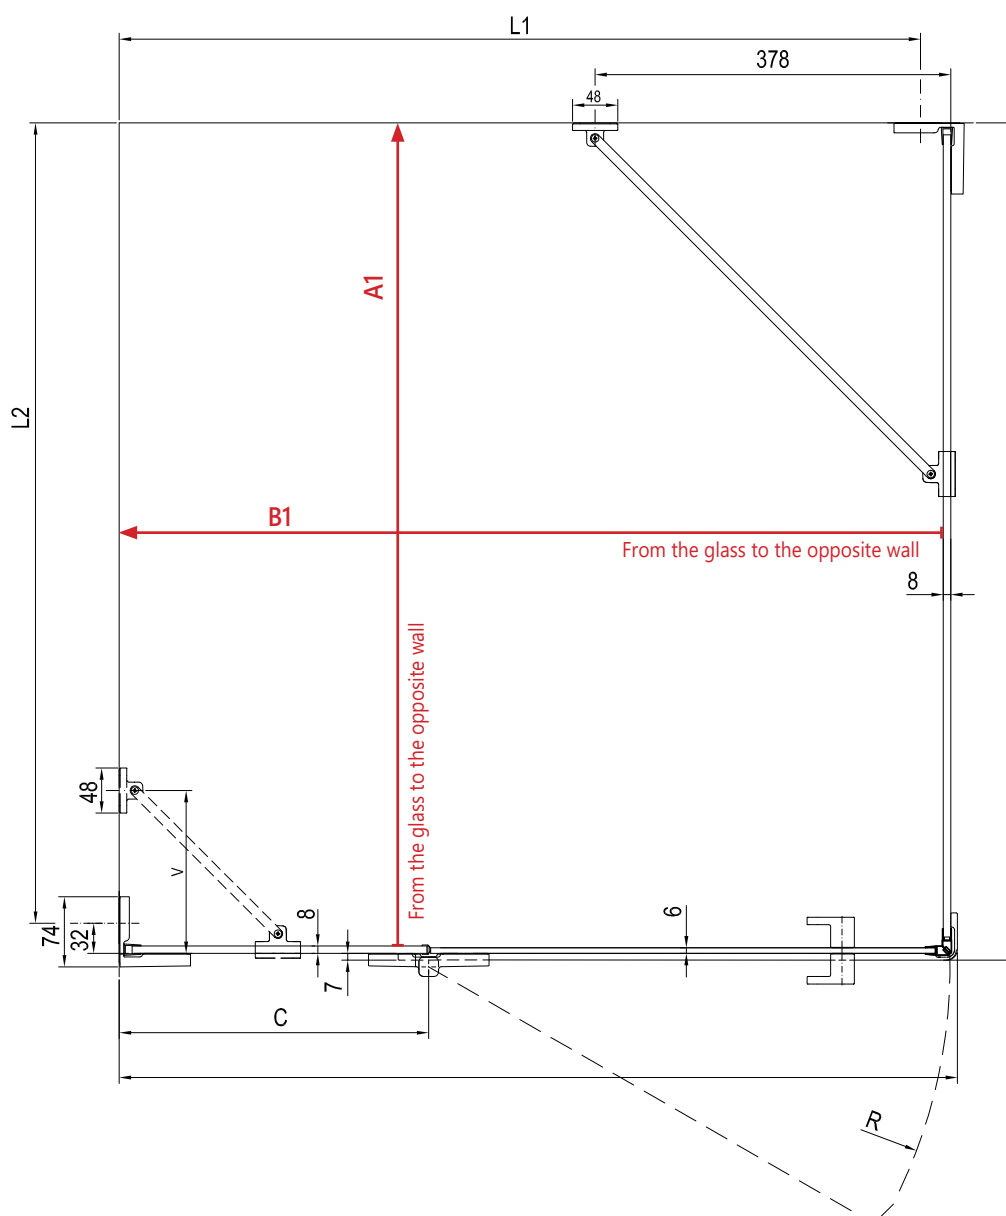

## BSRV4 - 80, 90, 100

 
Type	Floor inclination	Adjustment
BSRV4 - 80	774	+6, -6
BSRV4 - 90	874	+6, -6
BSRV4 - 100	974	+6, -6

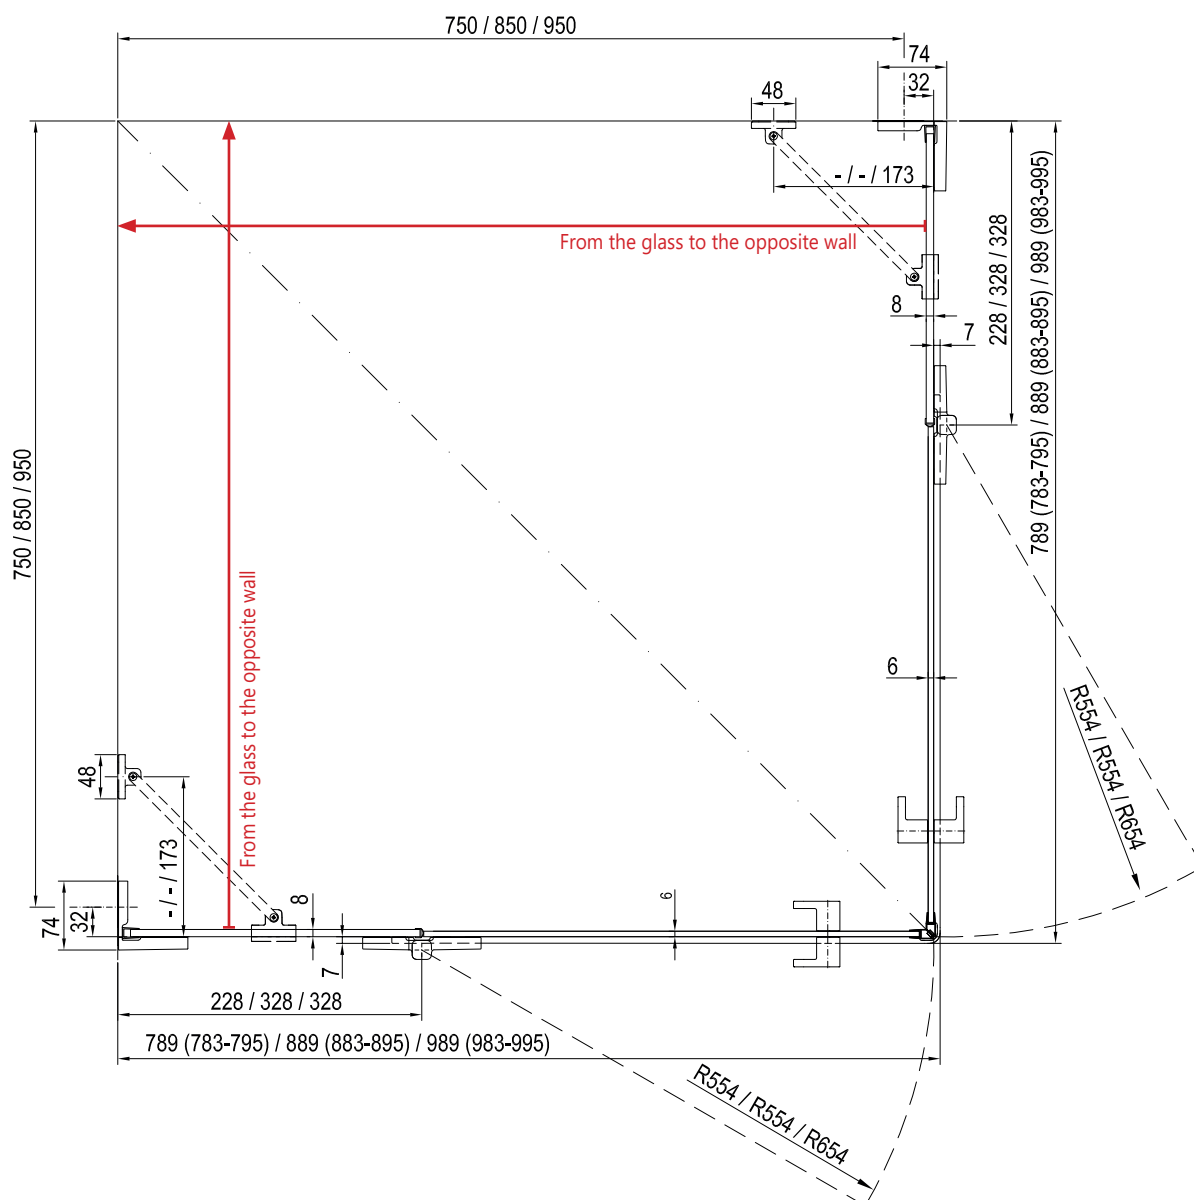

# Chrome

## CRV1 - 80, 90, 100 + CRV1 - 80, 90, 100

 Type	Floor inclination	Adjustment
CRV1 - 80	749	-10, +10
CRV1 - 90	849	-10, +10
CRV1 - 100	949	-10, +10

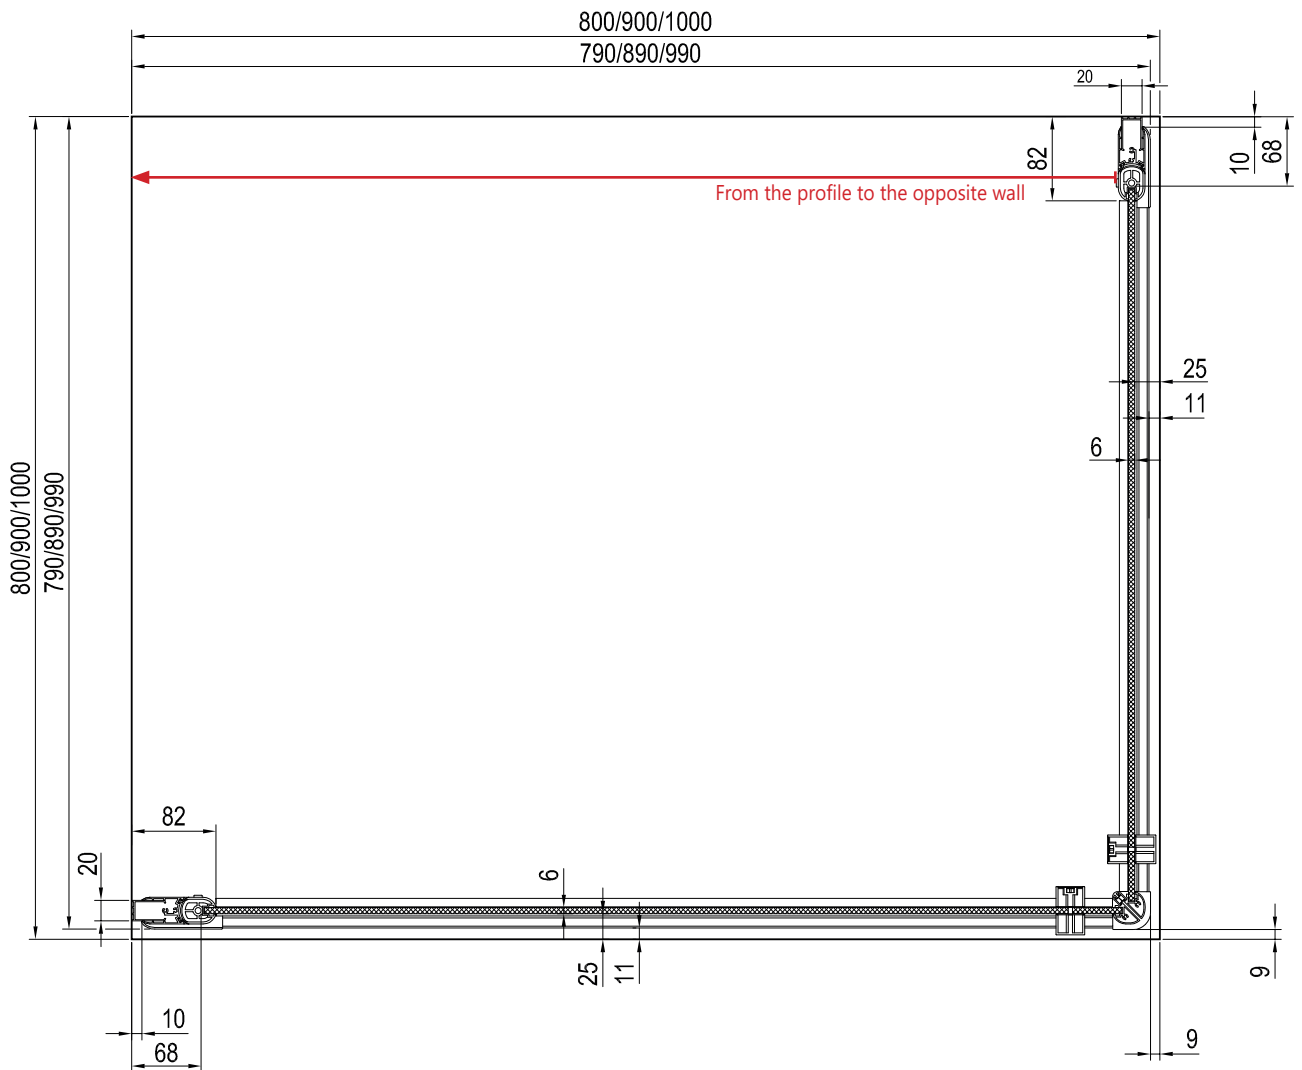




# Chrome

## CRV2 - 80, 90, 100, 110, 120 + CRV2 - 80, 90, 100, 110, 120

 
Type	Floor inclination	Adjustment
CRV2 - 80	749	-10, +10
CRV2 - 90	849	-10, +10
CRV2 - 100	949	-10, +10
CRV2 - 110	1049	-10, +10
CRV2 - 120	1149	-10, +10

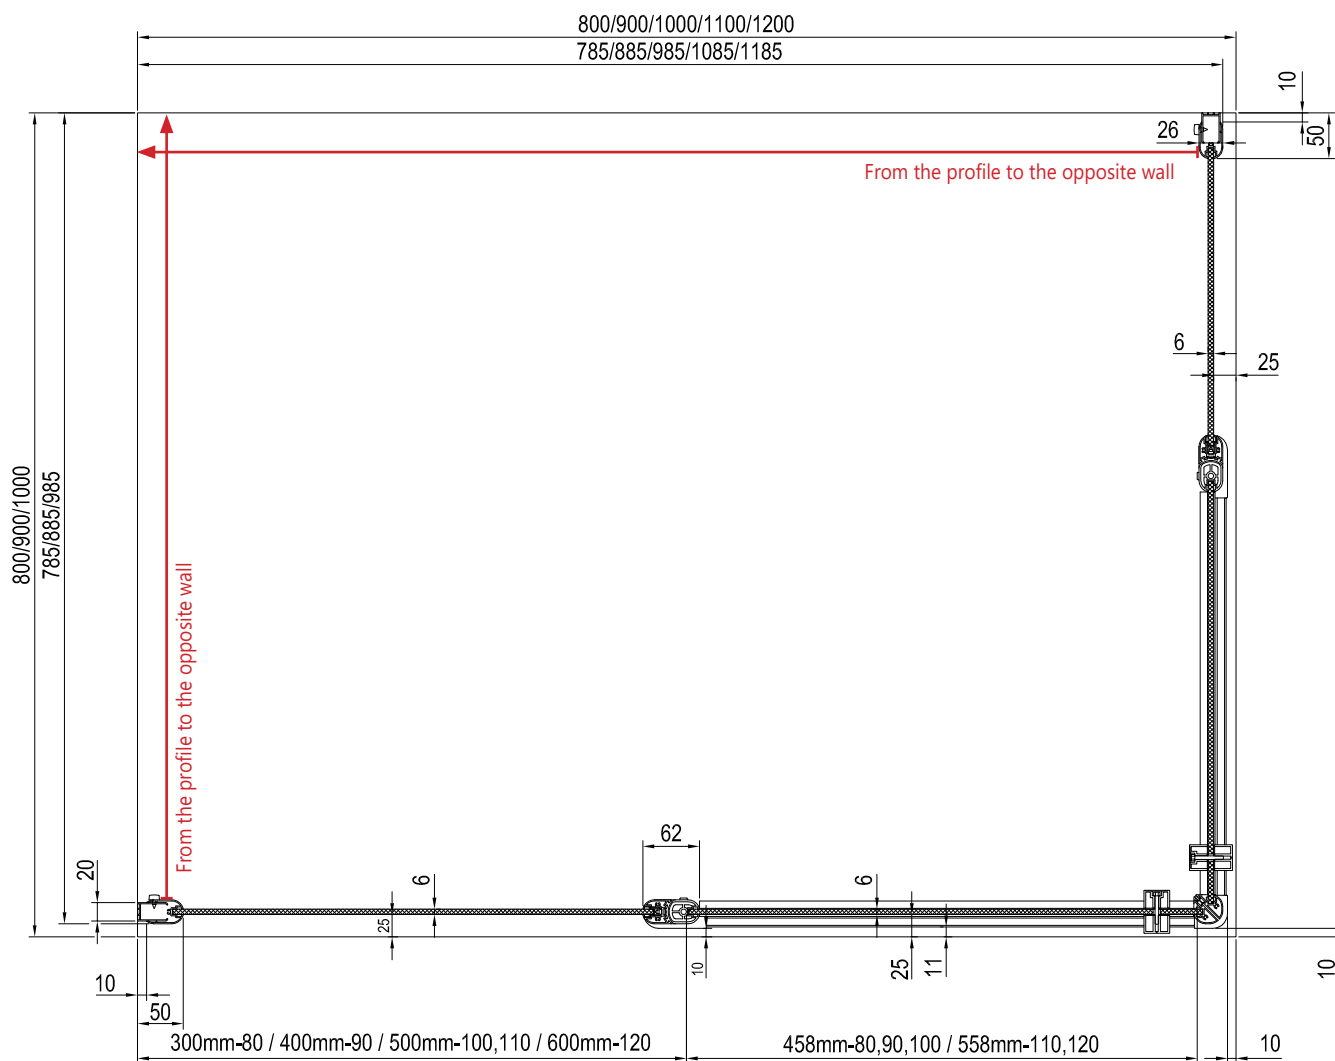

# Chrome

## CRV2 - 80, 90, 100, 110, 120 + CPS - 80, 90, 100

 
Type	Floor inclination	Adjustment
CRV2 - 80	B 749	-10, +10
CRV2 - 90	B 849	-10, +10
CRV2 - 100	B 949	-10, +10
CRV2 - 110	B 1049	-10, +10
CRV2 - 120	B 1149	-10, +10
CPS - 80	A 749	-10, +10
CPS - 90	A 849	-10, +10
CPS - 100	A 949	-10, +10

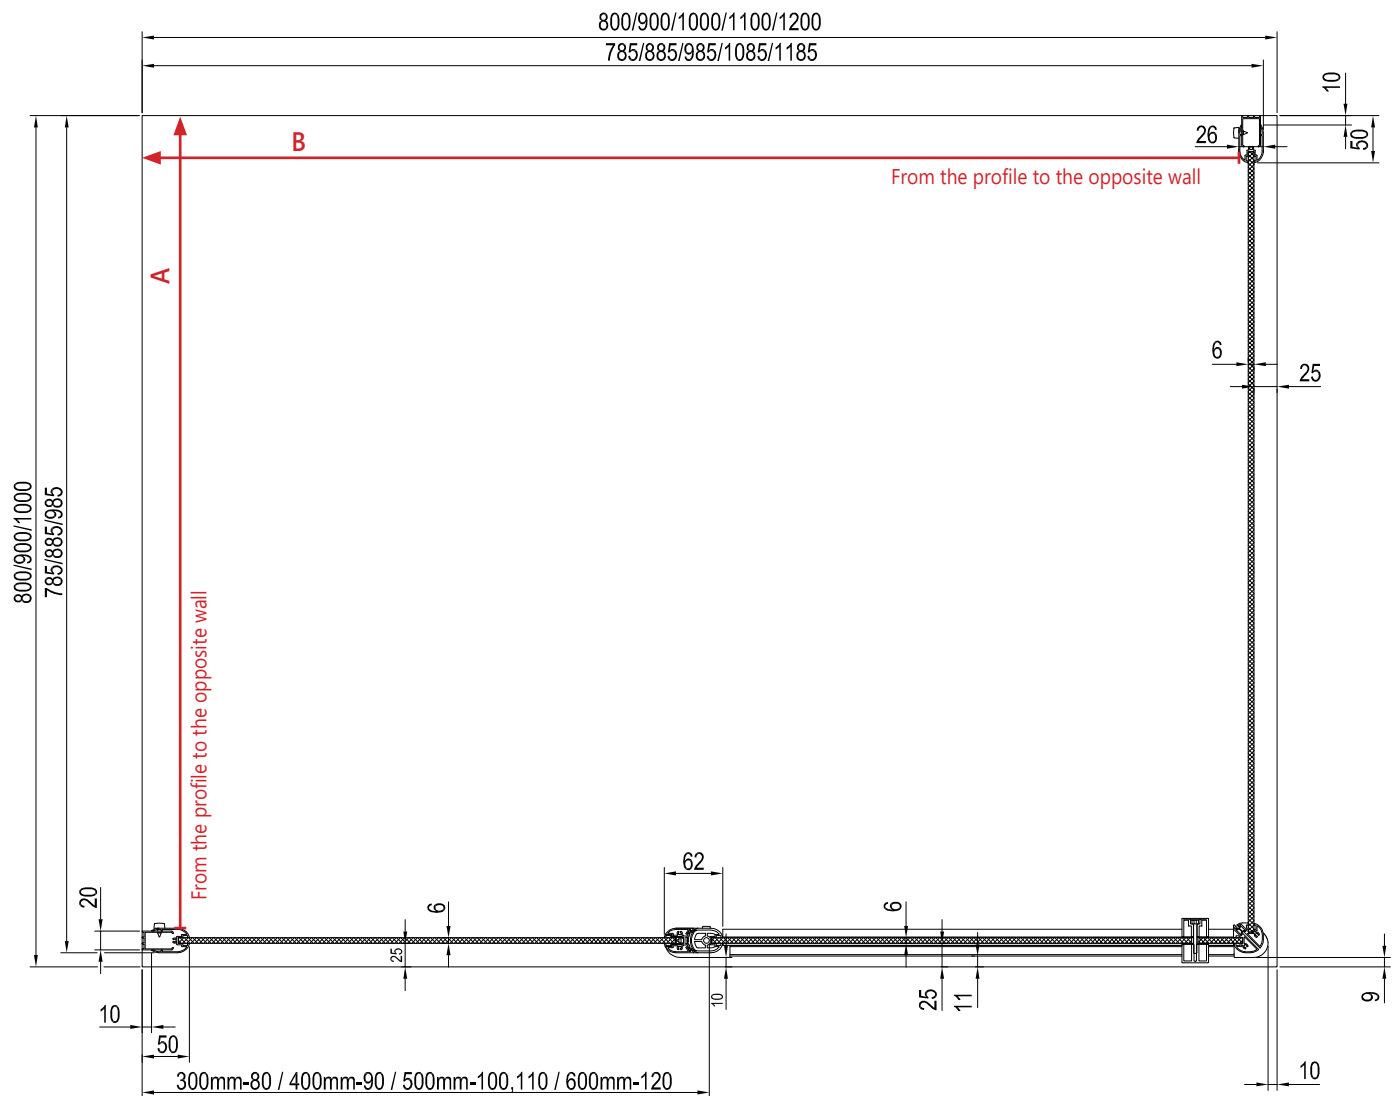

# Walk-In

## Walk-In Wall + W SET 80, 90, 100

 Type	Floor inclination
W SET - 80	D1 792
W SET - 90	D1 892
W SET - 100	D1 992

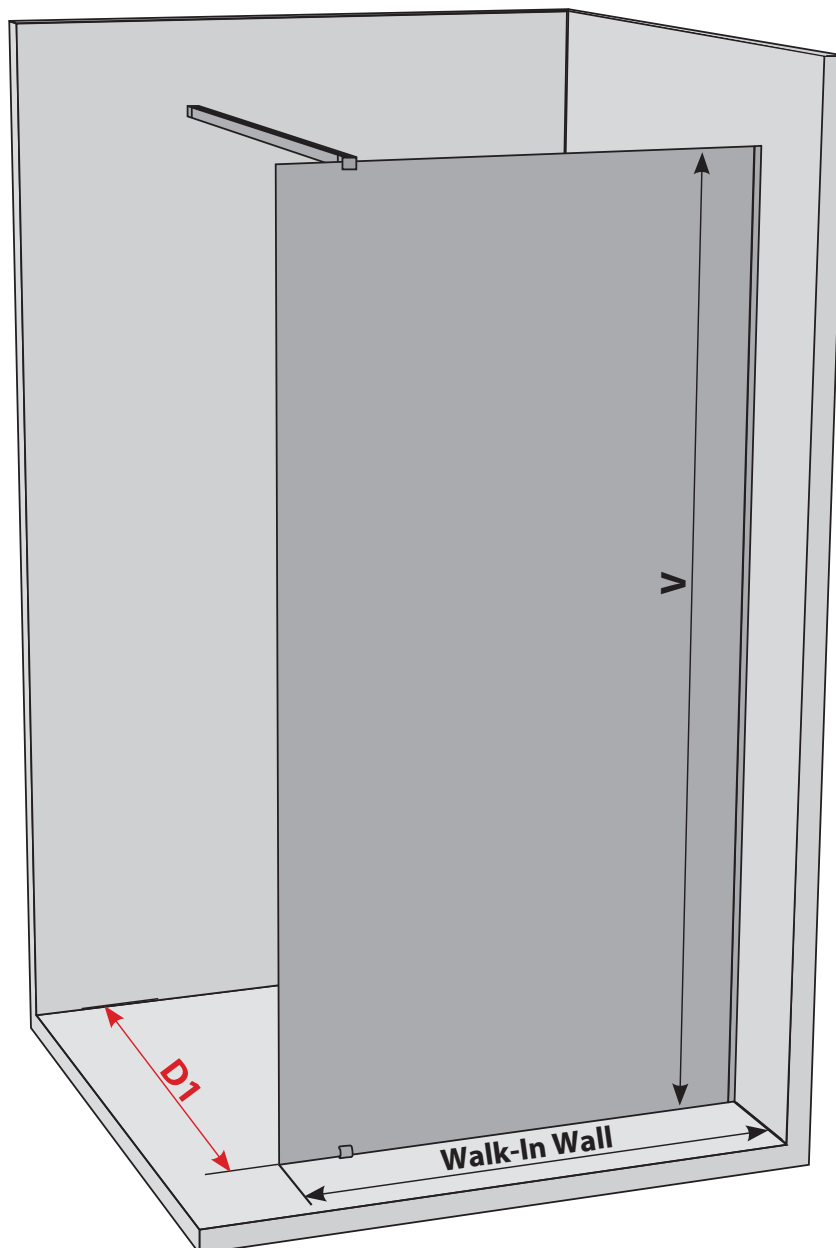



**RAVAK a.s.**  
**Obecnická 285, 261 01 Příbram 1**  
**Czech Republic**  
**Tel.: +420 318 427 288**  
**fax: +420 318 427 269,**  
**+420 318 427 278**  
**e-mail: [export@ravak.com](mailto:export@ravak.com)**  
**[www.ravak.com](http://www.ravak.com)**

The manufacturer reserves the right to make technical changes to individual products, design and packaging of the product and make changes to prices.  
The manufacturer is not responsible for any print errors, should they occur.



**RAVAK®**